

# How to Replace Audi A4 Windshield Blades

It is common for plastic wiper blades to...

Written By: Vinod Ragoonauth



#### INTRODUCTION

It is common for plastic wiper blades to oxidize during seasonal temperature changes, and a pair of new wiper blades will help improve visibility during different weather conditions.

This guide demonstrates a windshield wiper blade replacement for an Audi A4 2013-2015 model. In this guide, we are using Michelin Wiper Blades purchased from Costco. If you are purchasing parts from another store, make sure that it fits the Audi wiper blades connector.




#### **PARTS:**

- michelin 20 inches wiper blades (1) auto parts
- michelin 24 inches wiper blades (1) auto parts

#### Step 1 — Windshield Blade





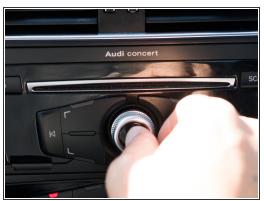

- Go inside the car and press the "CAR" button on the control panel.
- Scroll down the control wheel to "Windshield wipers"
- Press down the center button on the control wheel to select the option.







- Press down the center button on the control wheel to edit the service position.
- In the drop-down menu, switch it from "off" to "on" by scrolling the control wheel and pressing the center button.
- (i) The windshield wipers will now be in the up position.







- The windshield wipers now should be able to lift towards the windshield at 90 degrees.
- Lift up the windshield blades as shown in images 2 and 3.







- In the packaging for the Michelin windshield wipers, the wipers are pre-installed with a top-lock connector.
- Raise the pre-installed top-lock connector.





- Pinch the bottom of the connector to release the cover and remove the top-lock connector.
- (i) The Audi A4 uses a "Top Lock-Narrow" connector.







- Install the new "Top Lock-Narrow" connector onto the base connector.
- Insert the top connector into the base connector and press down until it clicks into place.






- Install the blade into the blade arm, sliding the new wiper blades down until it clicks and is locked into place.
- Make sure to install the 24 inches wiper blade on the driver side, and the 20 inches wiper blade on the passenger side.







- Install the new connector cover by pinching the base of the connector.
- Close the connector cover on both sides of the wiper blades.

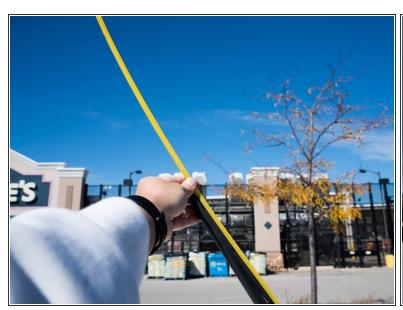



- Remove the yellow wiper protector on both blades.
- Put the wiper back on the windshield

# Step 10







Set the windshield wiper service position back to "off".

Test the new wiper blades before you hit the road for safety.